


To open a cash drawer when the console will not activate the solenoid and open the cash drawer or when a key is unavailable :



1. Disconnect the cash drawer from its power and communication source. Place cash drawer face down in order to access three screws on bottom rear back of drawer.

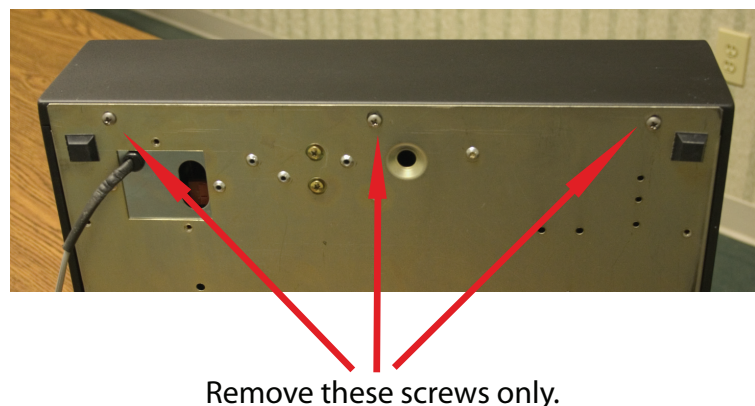

2. Remove the three screws located across the top back rear bottom edge of the cash drawer.




3. Gently open the rear top and bottom of cash drawer to access the cash drawer solenoid.

Tronitec, Inc. repairs, refurbishes and resells equipment made by the original equipment manufacturers. Tronitec, Inc. is not associated with, affiliated with, related to, authorized by, nor certified by referenced companies.

Manufacturers names, product names and part numbers are for reference and identification purposes only. All product names and company logos are the trademarks of their respective owners.

4. Press solenoid plunger on left of solenoid to activate solenoid and release cash drawer latch.
Cash drawer will open upon pressing solenoid plunger.

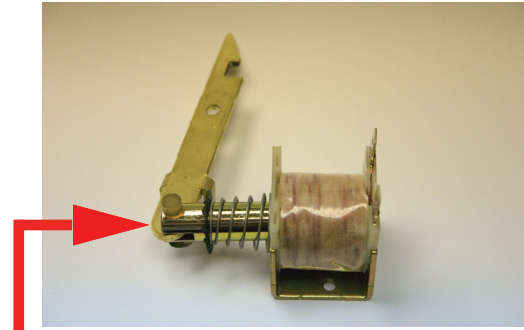

Press Solenoid here.

5. Carefully Re-assemble rear of cash drawer and replace screws.



Tronitec, Inc. repairs, refurbishes and resells equipment made by the original equipment manufacturers. Tronitec, Inc. is not associated with, affiliated with, related to, authorized by, nor certified by referenced companies.

Manufacturers names, product names and part numbers are for reference and identification purposes only. All product names and company logos are the trademarks of their respective owners.