TRONITEC SERVICE DOCUMENT (TSD#47) VEEDER ROOT TLS-350 TCP/IP MODULE INSTALLATION

TCP/IP modules come with all settings reset to factory defaults. To properly configure the TCP/IP module's IP address/setup, you <u>must</u> use a PC connected to the TCP/IP module. Also, be sure to perform the Communications Setup on the console to specify which type of module you are installing.

Refer to Veeder Root manual 577013-776 TCP/IP Interface Module Installation Guide for detailed instructions.

Tronitec, Inc. repairs, refurbishes, and resells equipment made by the original equipment manufacturers. Tronitec, Inc. is not associated with, affiliated with, related to, authorized by, nor certified by referenced companies. Manufacturers names, product names and part numbers are for reference and identification purposes only. All product names and company logos are the trademarks of their respective owners.