



Steps to perform a Memory Clear on a CPU5 Ruby Super System :

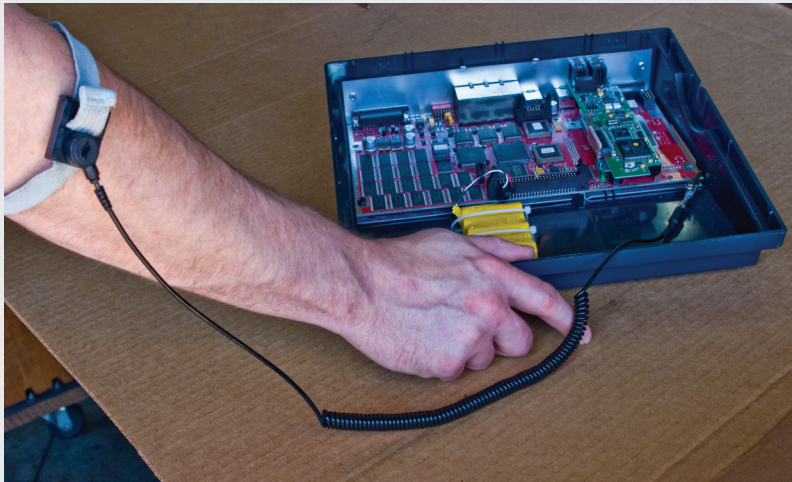

1. Connect to Ground Plane of the Ruby CPU5 Main Board with Ground Wrist Strap (Item Code #6571).

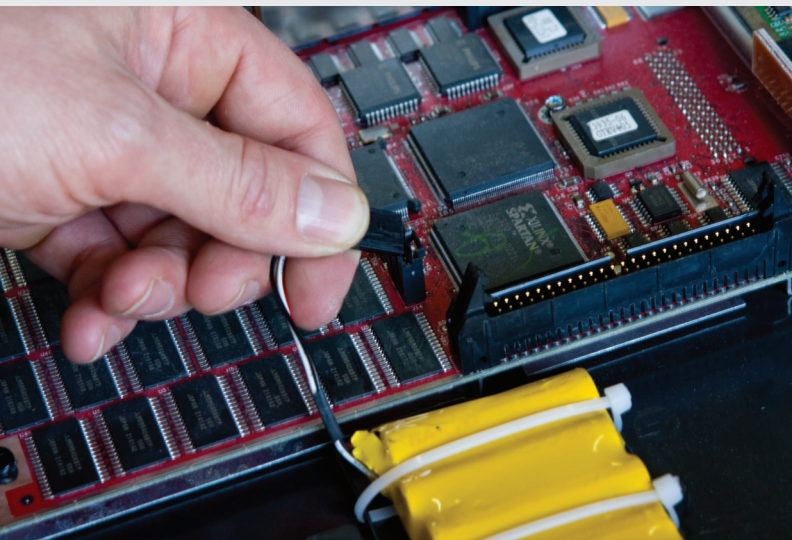

2. Disconnect Ruby Super System Battery Pack from CPU5 Main Board.



TRONITEC

1800 Sandy Plains Pkwy., Suite 120, Marietta, GA 30066

800-962-2588

www.tronitec.com

Tronitec, Inc. repairs, refurbishes and resells equipment made by the original equipment manufacturers. Tronitec, Inc. is not associated with, affiliated with, related to, authorized by, nor certified by referenced companies. Manufacturers names, product names and part numbers are for reference and identification purposes only. All product names and company logos are the trademarks of their respective owners.

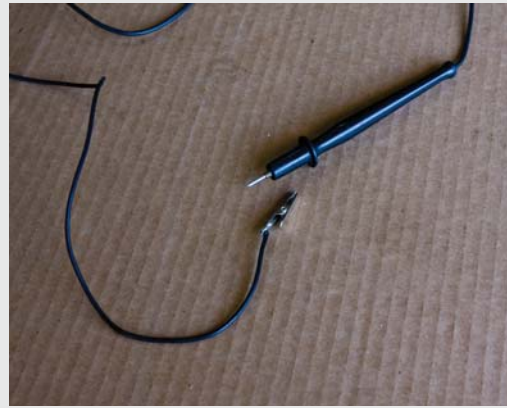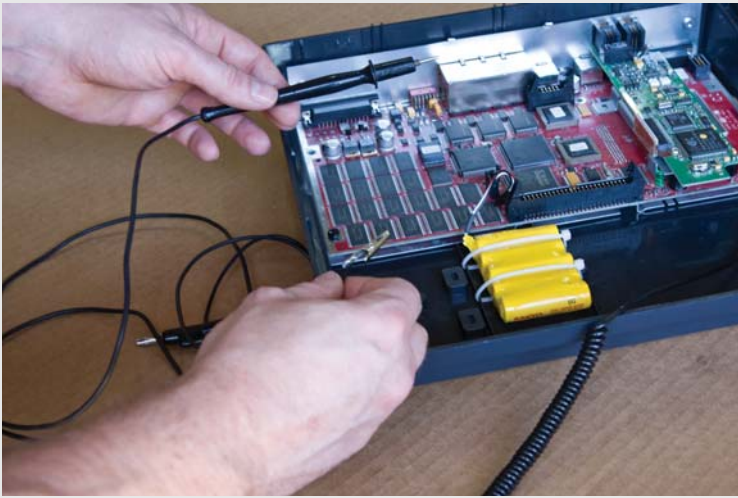

**Custom Alligator Clip and Probe Assembly
(Item code # 7374).**



- 3. Connect Alligator Clip from custom Alligator Clip and Probe Assembly (Item 7374) to CPU5 Main Board Ground Plane.**
- 4. Place Probe on pin # 32 (power pin) of RAM Chip at designation U49.**
- 5. Hold Alligator Clip and Probe from Steps 3 and 4 above in these positions for a minimum of five (5) seconds.**

TRONITEC

1800 Sandy Plains Pkwy., Suite 120, Marietta, GA 30066

800-962-2588

www.tronitec.com

Tronitec, Inc. repairs, refurbishes and resells equipment made by the original equipment manufacturers. Tronitec, Inc. is not associated with, affiliated with, related to, authorized by, nor certified by referenced companies. Manufacturers names, product names and part numbers are for reference and identification purposes only. All product names and company logos are the trademarks of their respective owners.